


Touchstone™ CM550 A/B
Cable Modem

**QUICK
INSTALL
GUIDE**




INSTALLATION

START

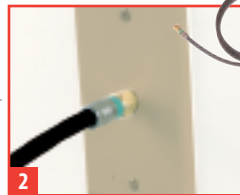



NOT INCLUDED

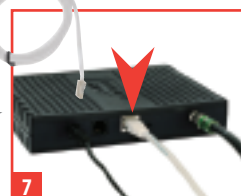

MOUNTING

For mounting on drywall:

- Two #6 screws
(*not included*)
- Two 1/4" (6mm)
drywall anchors
(*not included*)
- Drill with
1/4" (6mm) bit
(*not included*)

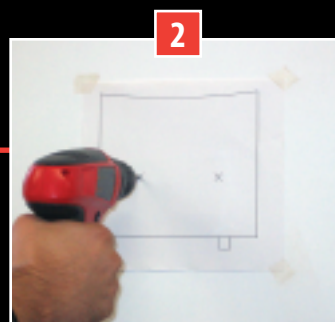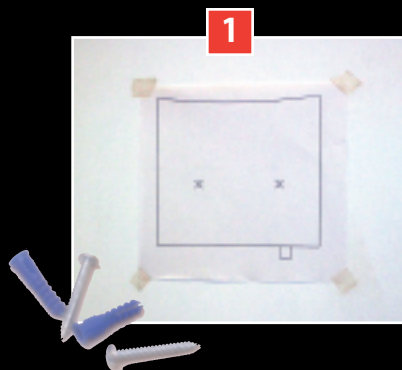

For mounting on plywood or studs:

- Two 1" (25mm)
wood screws—
diameter of screw
heads must be
between 3/16" and 1/4"
(4.5mm and 6mm)
(*not included*)
- Drill with
1/8" (3mm) bit
(*not included*)





www.arrisi.com



ARRIS
RoHS Compliant
GREEN

Touchstone™ CM550 A/B Telephony Modem
Quick Install Guide
©2005 ARRIS International, Inc.
Patents Pending. All rights reserved.

All information contained in this document is subject to
change without notice.

ARRIS reserves the right to make changes to equipment
design or program components, as progress in engineering,
manufacturing methods, or other circumstances may
warrant.

ARRIS, the ARRIS logo and Touchstone are trademarks of
ARRIS International Inc. All other trademarks are the
property of their respective holders.

Standard
Draft 1.0



WALL MOUNTING

TEMPLATE



Cut along the dotted line and tape to wall.



WALL-MOUNTING

INSTRUCTIONS

- **For wall mounting your Cable Modem**, select a location within 5 ft (1.6m) of an electrical outlet. Check that the selected electrical outlet cannot be interrupted via a wall switch. When connecting the Cable Modem to your computer, use the supplied cables. Remember to leave sufficient clearance between the bottom of the cable modem and the floor or shelving.
- **Para montaje en la pared de vuestro Modem de Cable**, seleccione el lugar con un alcance para conexión eléctrica en un rango de 5 pies o 1.6 m. Verifique que la conexión eléctrica no este sujeto a interrupción de servicio por algún interruptor de pared. Utilice los cables proporcionados en el momento de la conexión de vuestra computadora con el Modem de Cable. Recuerde de tener suficiente espacio libre entre la parte inferior del modem de cable y el piso o estantería.
- **Pour le montage mural de votre Modem de câble**, choisissez un endroit à moins de 1.6m d'une prise de courant. Vérifiez que la prise choisie ne soit pas contrôlée par interrupteur mural. En reliant le Modem de câble à votre ordinateur, employez les câbles fournis. Laissez un dégagement suffisant entre le fond du modem de câble et le plancher ou ou l'étagère.
- **Voor wandmontage van de Kabel Modem**, kies een locatie op maximaal 1,6m van een stopcontact. Het netsnoer moet zijn aangesloten op een stopcontact zonder schakelaar. Gebruik de bijgeleverde kabels voor de verbinding tussen de Kabel Modem en de computer. Zorg dat er voldoende ruimte is tussen de onderkant van de Kabel Modem en de vloer / wand.
- **Para a montagem do seu Modem junto a parede**, selecione um local com até 1.6m (5 ft) da tomada. Verifique que a tomada elétrica selecionada não seja acionada por um interruptor de luz. Quando conectar o seu Modem ao seu computador, utilize os cabos fornecidos. Lembre-se de deixar um espaço entre a parte de baixo do Modem e o piso ou divisória.

➤ לשם התקנת מודם טלפוני על קיר, בחר מיקום במרחק של 1.6 מ' משקע חשמל. ודא שלא ניתן לנתק את השקע שנבחר באמצעות מתג המותקן בקיר. אם אתה מחבר את המודם הטלפוני למחשב, השתמש בכבלים שסופקו. הקפד להותיר מרווח מספיק בין חלקו התחתון של המודם הטלפוני לבין הרצפה או המדפים.